



# RAN...

## 18.14 ÷ 25

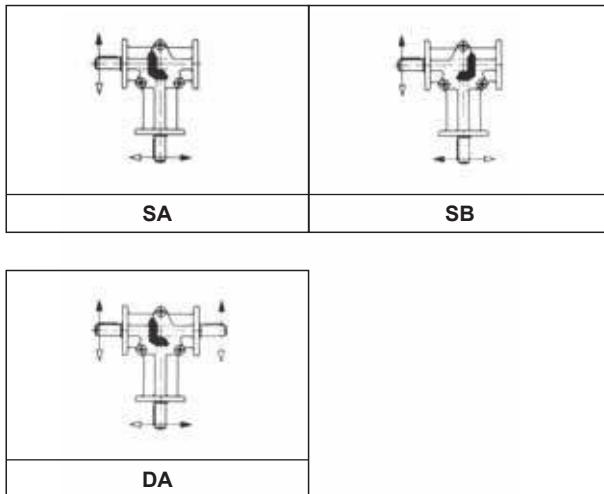

<b>RAN...</b>	Cuscinetti Bearings Roulements Kugellager Rodamientos	Anelli di tenuta Oilseals Joint d'étanchéité Simmerringe Retén
	<b>6</b>	<b>9</b>
<b>18.14</b>	<b>6204</b> 20/47/14	<b>20/47/7</b>
<b>20</b>	<b>6205</b> 25/52/15	<b>25/52/7</b>
<b>25</b>	<b>6206</b> 30/62/16	<b>30/62/7</b>

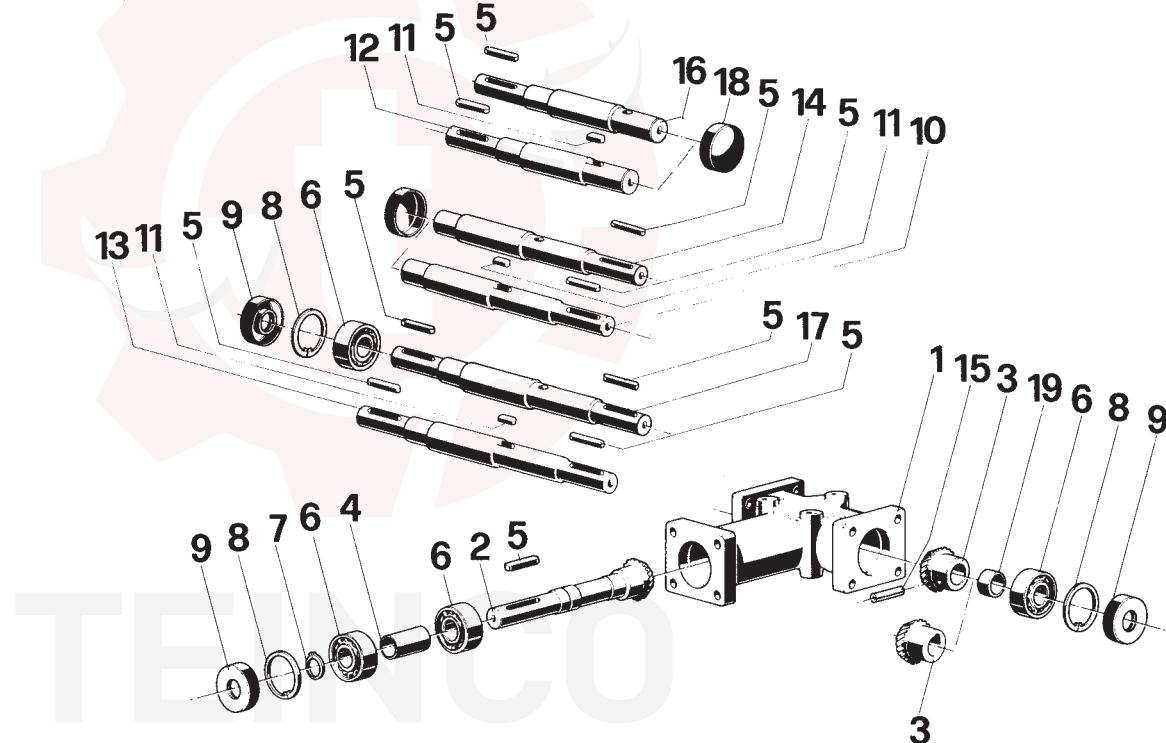

<b>RAN...</b>	<b>Versione Version Version Bauform Version</b>	<b>N.</b>	<b>Denominazione</b>	<b>Denomination</b>	<b>Dénomination</b>	<b>Benennung</b>	<b>Denominación</b>
<b>18.14</b> <b>20 - 25</b>	<b>SA</b> <b>SB</b> <b>DA</b>	1	Cassa	<i>Casing</i>	Carter	<i>Gehäuse</i>	Caja
		2	Pignone conico	<i>Bevel pinion</i>	Pignon conique	<i>Kegelrad</i>	Piñon conico
		3	Corona conica	<i>Ring bevel gear</i>	Couronne conique	<i>Kegelkranz</i>	Corona conica
	<b>SA</b> <b>SB</b> <b>DA</b>	4	Distanziale	<i>Spacer ring</i>	Entretoise	<i>Distanzring</i>	Distanciador
		5	Linguetta	<i>Key</i>	Clavette	<i>Einlegekeil</i>	Chaveta
		6	Cuscinetto	<i>Bearing</i>	Roulement	<i>Kugellager</i>	Rodamiento
		7	Seeger	<i>Circlip</i>	Seeger	<i>Seeger</i>	Anillo elástico
		8	Seeger	<i>Circlip</i>	Seeger	<i>Seeger</i>	Anillo elástico
		9	Anello di tenuta	<i>Oilseal</i>	Joint d'étanchéité	<i>Simmering</i>	Retén
<b>18.14</b>	<b>SA</b>	10	Albero lento semplice	<i>Single output shaft</i>	Arbre de sortie simple	<i>Abtriebswelle</i>	Eje de salida simple
	<b>SA</b>	11	Linguetta	<i>Key</i>	Clavette	<i>Einlegekeil</i>	Chaveta
	<b>SB</b>	12	Albero lento semplice	<i>Single output shaft</i>	Arbre de sortie simple	<i>Abtriebswelle</i>	Eje de salida simple
	<b>SB</b>	11	Linguetta	<i>Key</i>	Clavette	<i>Einlegekeil</i>	Chaveta
<b>DA</b>	<b>DA</b>	13	Albero lento doppio	<i>Double output shaft</i>	Arbre de sortie double	<i>Doppelte Abtriebswelle</i>	Eje de salida doble
	<b>DA</b>	11	Linguetta	<i>Key</i>	Clavette	<i>Einlegekeil</i>	Chaveta
	<b>DA</b>	9	Anello di tenuta	<i>Oilseal</i>	Joint d'étanchéité	<i>Simmering</i>	Retén
<b>20 - 25</b>	<b>SA</b>	14	Albero lento semplice	<i>Single output shaft</i>	Arbre de sortie simple	<i>Abtriebswelle</i>	Eje de salida simple
	<b>SA</b>	15	Spina elastica	<i>Spring pin</i>	Goupille élastique	<i>Elastischstift</i>	Pasador elastico
	<b>SB</b>	16	Albero lento semplice	<i>Single output shaft</i>	Arbre de sortie simple	<i>Abtriebswelle</i>	Eje de salida simple
<b>20</b>	<b>SB</b>	15	Spina elastica	<i>Spring pin</i>	Goupille élastique	<i>Elastischstift</i>	Pasador elastico
	<b>DA</b>	17	Albero lento doppio	<i>Double output shaft</i>	Arbre de sortie double	<i>Doppelte Abtriebswelle</i>	Eje de salida dble
	<b>DA</b>	15	Spina elastica	<i>Spring pin</i>	Goupille élastique	<i>Elastischstift</i>	Pasador elastico
<b>18.14</b> <b>20 - 25</b>	<b>SA</b> <b>SB</b>	18	Anello di tenuta	<i>Oilseal</i>	Joint d'étanchéité	<i>Simmering</i>	Retén
	<b>20</b>	<b>SA - SB</b> <b>DA</b>	Distanziale	<i>Spacer ring</i>	Entretoise	<i>Distanzring</i>	Distanciador